

1



Unplug the power cord from the power supply.

2



Remove the bezel.

3



Identify dust filters.

4



Remove filters, clean, re-install filters and bezel.